


# 314 Tilting Microwave Detector

The 314 Tilting Microwave Detector provides occupancy detection for the automatic control of DALI lighting loads. The unit can also be controlled using the Helvar 303 IR (infrared) remote control handset.

The 314 detects movement using its highly sensitive microwave detector. It works by emitting low-power microwave signals and measuring the reflections as the signals bounce off moving objects.

The 314 has an adjustable sensor head that allows the area of detection to be optimised for the required application. When an area is no longer occupied, the load will switch off after a certain time. This time-out period is configured using Helvar’s lighting system design and control software: Designer, or Toolbox.

## Features and Connections

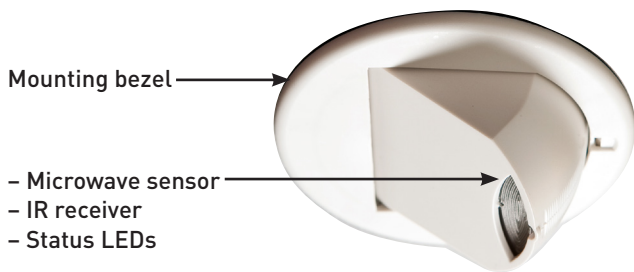

**Microwave sensor**

Detects movement within the detection range allowing load control in response to changes in room occupancy.

**IR receiver**


Receives control and programming commands from a 303 IR (infrared) handset (available separately).

**Status LED**

The red LED flashes to indicate the following:

Valid setting received	
Identify active	

= Red LED

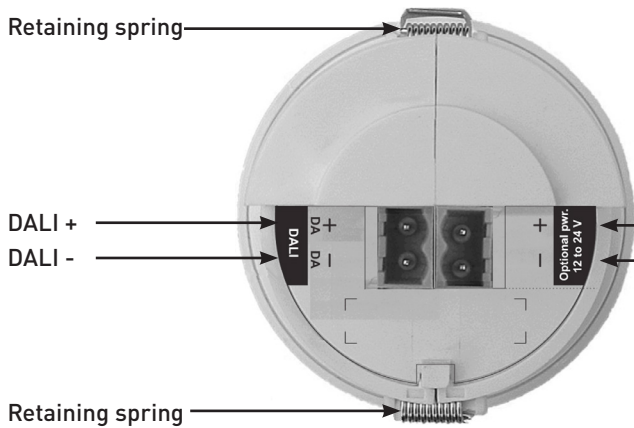

**Optional connection to external power**

12 V to 24 V. See 'External Power Supply (Optional)' on page 3.

**DALI connection**

The DALI connection is made via DA+ and DA- terminals. The DALI input is not polarity sensitive (unless you are using an external power supply).

## Installation


1. Install the unit: see 'Connection and Fixing' on page 2.
- 2a. Connect the DALI terminal blocks to the sockets located at the rear of the sensor.
- 2b. If required, connect the optional power supply: see 'External Power Supply (Optional)' on page 3.
3. Power the unit up.
4. After the lighting load switches on, by default it will switch off after 20 minutes of no movement detected.

## Installation Notes


- Position the sensor so that the occupants of the room are normally inside the detection zone.
- Do not install the sensor within 1 m of any lighting, forced air heating, or ventilation equipment.
- Do not fix the sensor to an unstable or vibrating surface.
- Install the unit as far away as possible from the surface of metal objects.
- The detection pattern illustrated [see 'Detection Pattern' on page 3] is based on a mounting height of 2.8 m.
- A lower mounting height will decrease the overall size of the detection zone.

## Connection and Fixing


### Mounting hole

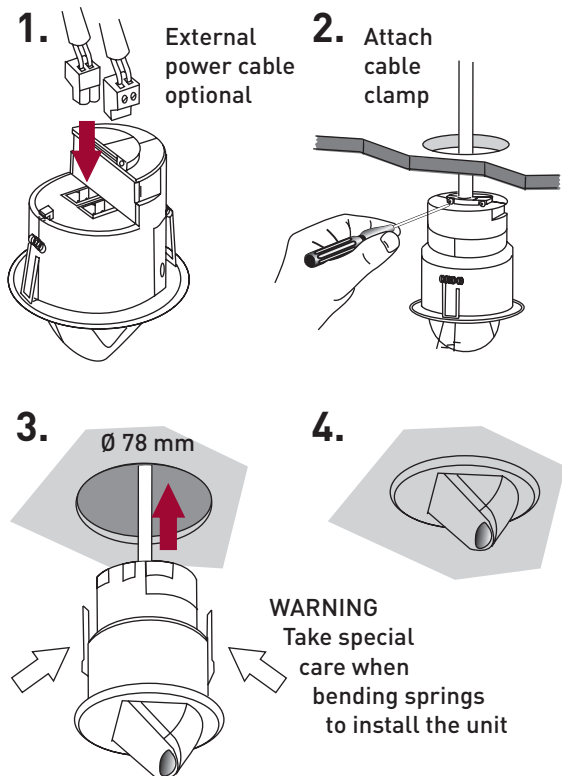

### Surface back box SBB-B

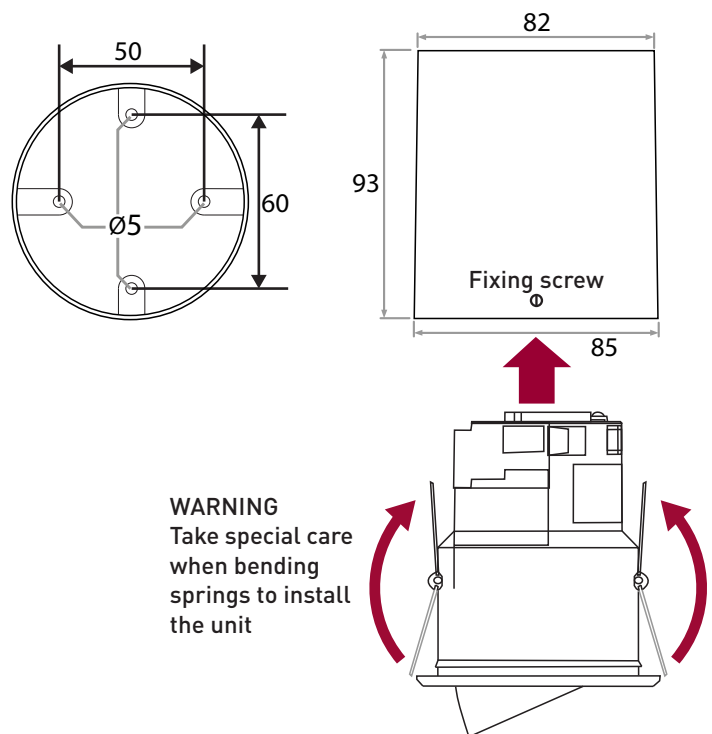


## Head Locking

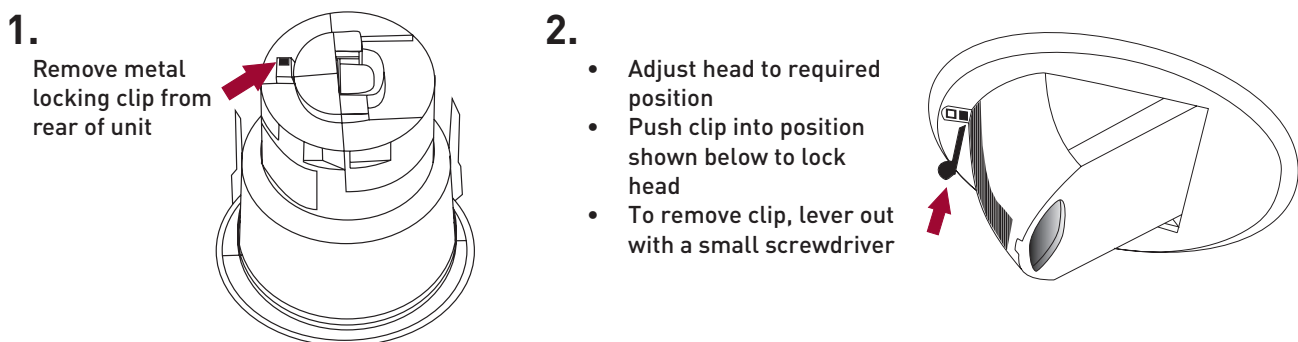

## Detection Pattern


Ideal for large office or classroom, and for corridors and aisles

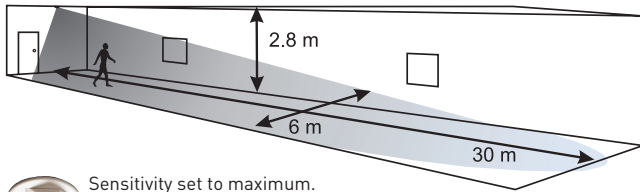

Sensitivity set to maximum.  
Detector head position: 80°

Ideal for open plan areas and offices

*freedom in lighting*

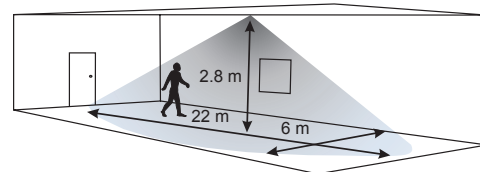


Sensitivity set to maximum.  
Detector head position: 0°

## External Power Supply (Optional)

The following table gives the various 12 V to 24 V external power supply units that can be used, as well as the sensor hardware revision needed for each of them. With some models, you must make a wire link between the DALI negative terminal and the negative terminal of the external power supply, as shown in the figure.

EPS	Current limited	Link from DA- to EPS-	Sensor hardware revision
Helvar 401	Yes	No	Any
Helvar 402	Yes	Yes	Any
Helvar 403	Yes	No	Any
Helvar LL6-U-C LED	Slow	No	4 or later
Generic 12 V to 24 V	No	No*	4 or later

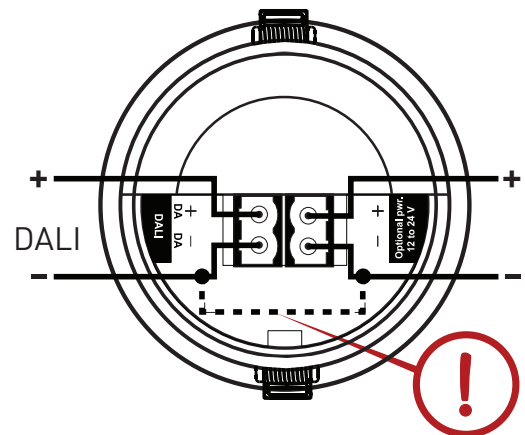

\* Except in some cases where the generic EPS output is referenced to earth.

## Remote Control

You can use the Helvar 303 IR Remote Control to send signals to the 313 detector to:

- recall lighting scenes 1-4;
- adjust light levels;
- store current level; and
- install preset levels for scenes 1-4.



### Helvar 303 IR Remote Control

See the 303 Remote User Manual (Helvar Document D004744) for full details.

## Other Functions

### Sensitivity

Adjust the sensitivity using *Designer*, or *Toolbox* (Helvar's lighting system design and control software).

**Note:** On maximum sensitivity, the detector unit is **extremely sensitive** to movement and may detect through glass, thin walls or partitions. If this causes a problem, reduce its sensitivity.

### Adjusting On, Exit and Transition time-Outs

The default time-outs for On, Exit and Transition can be altered using *Designer*, or *Toolbox*.

### Check connection to DALI Network

To check the sensor is correctly connected the DALI network, use the *Identify* function in *Designer*, or *Toolbox*.

### Using Designer and Toolbox Software

When using *Designer*, connect the PC to the lighting network via a Helvar Router.

When using *Toolbox*, connect the PC to the lighting network via a Helvar serial or USB interface.

For further information about *Designer* and *Toolbox*, see the *System Software* section of [www.helvar.com](http://www.helvar.com).

Helvar 314 Tilting Microwave Detector Installation Guide

## Connections

**External power / DALI:** Removable terminal block  
Wire size: 0.5 mm<sup>2</sup> – 1.5 mm<sup>2</sup>  
Solid or stranded

**Cable rating:** All cables must be mains rated.

## Power

**DALI supply input:** 13 V to 22.5 V

**DALI consumption:** 40 mA  
Note: DALI consumption is less than 2 mA when external power is supplied to the unit.

**(Optional) External Power:** 12 V to 24 V; 0.5 W

## Remote control functions

**Use Helvar 303 remote control to:**

- recall lighting scenes 1–4;
- adjust light levels;
- store current level; and
- install preset levels for scenes 1–4.

*Note: Adjust sensitivity using Designer, or Toolbox (not by remote control unit).*

## Microwave operating frequency

Model	Frequency
314	10.687 GHz UK, China, Hong Kong, India, Malaysia, Middle East, Singapore
314/R2	10.525 GHz Australia, and Europe, except for: UK, France, Portugal, Germany, Switzerland, Austria, Slovak Republic, Republic of Ireland
314/R3	9.900 GHz France, Portugal, Switzerland
314/R4	9.350 GHz Austria, Germany, Slovak Republic
314/R5	10.41 GHz Republic of Ireland

## Mechanical data

**Mounting hole diameter:** 78 mm

**Bezel diameter:** 85 mm

**Recommended clearance depth (incl. 50 mm for cabling):** 80 mm (without protective cover);  
100 mm (with protective cover)

**Material (casing):** Flame retardant ABS and PC/ABS

**Finish / Colour:** Matt / White RAL 9003

**Weight:** 124 g

**IP code:** IP30

## Operating conditions

**Ambient temperature:** +10 °C to +35 °C

**Relative humidity:** Max. 90 %, noncondensing

**Storage temperature:** –10 °C to +70 °C

## Conformity and standards

**EMC immunity:** EN 61000–6–1

**EMC emission:** EN 61000–6–3

**Safety:** EN 60730–1


**Environment:** Complies with WEEE and RoHS directives

## Version information

**Software version:** 6

**Hardware version:** Rev. 4

## Dimensions

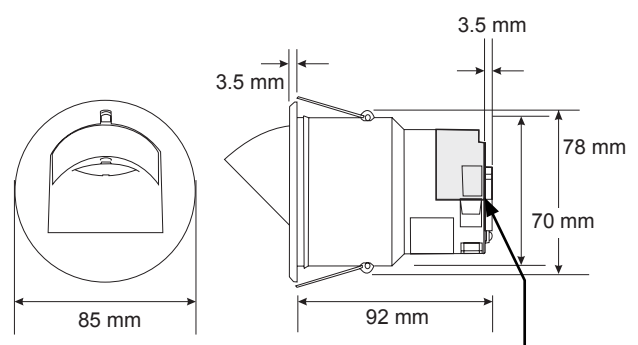

Hole diameter: Ø78 mm Protective cover